



For model#: SLFT#G3/9CCT5S/DUALDIM, SLFT\$HOG3/9CCT5S/DUALDIM, Where # means 4-9.5 which indicates the size and \$ means 6 or 8 which indicates the size.

SELECTFIT DUALDIM DOWNLIGHT INSTALLATION GUIDE - WARNING

WARNING - READ ALL PRODUCT LABELS AND INSTRUCTIONS BEFORE INSTALLING FIXTURE. LIRE TOUTES LES ETIQUETTES ET LES INSTRUCTIONS AVANT DE PROCEDER A L'INSTALLATION.

WARNING - THE FIXTURE IS INTENDED FOR MOUNTING ONLY IN A COVERED CEILING WHERE ONLY THE LED SIDE OF THE LUMINAIRE WILL BE EXPOSED TO WET LOCATION. LE LUMINAIRE EST PREVU POUR ETRE INSTALLER DANS UN PLAFOND COUVERT, OU SEUL LA FACE AVEC LES LEDS PEUT ETRE EXPOSE A UN ENVIRONEMENT MOUILLE.

WARNING - INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN L'INSTALLATION DU LUMINAIRE DOIT ETRE FAITE UNE FOIS LE COURANT MIS HORS TENSION.

LE COURANT MIS HORS TENSION.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK. INSTALLATION OF THIS RETROFIT KIT REQUIRES A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE LUMINAIRE'S ELECTRICAL SYSTEM AND THE HAZARD INVOLVED. IF NOT QUALIFIED, DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN. AVERTISSEMENT - RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE, L'INSTALLATION DE CE NÉCESSAIRE DE MODERNISATION EXIGE UNE PERSONNE FAMILIÈRE AVEC LA CONSTRUCTION ET LE FONCTIONNEMENT DU SYSTÈME ÉLECTRIQUE DU LUMINAIRE ET DES RISQUES ASSOCIES. TOUTE PERSONNE QUI N'EST PAS QUALIFIEE NE DOIT FAIRE AUCUNE TENTATIVE D'INSTALLATION ET DOIT CONTACTER UN ELECTRICIEN QUALIFIE.


WARNING - RISK OF FIRE OR ELECTRIC SHOCK. INSTALL THIS KIT ONLY IN THE LUMINAIRE THAT HAS THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND/OR DRAWINGS AND WHERE THE INPUT RATING OF THE RETROFIT KIT DOES NOT EXCEED THE INPUT RATING OF THE LUMINAIRE. AVERTISSEMENT - RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE. N'INSTALLER CE NÉCESSAIRE QUE DANS LE LUMINAIRE DONT LES CARACTERISTIQUES DE CONSTRUCTION ET LES DIMENSIONS SONT MONTREES DANS LES DESSINS ET PHOTOS, ET OU LE COURANT D'ENTREE DU LUMINAIRE NE DEPASSE PAS LE COURANT MAXIMUM INDIQUE.

NE DEPASSE PAS LE COURANT MAXIMUM INDIQUE.

DO NOT MAKE OR ALTER ANY OPEN HOLES IN AN ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS DURING KIT INSTALLATION.IL EST INTERDIT DE FAIRE OU DE MODIFIER UNE OUVERTURE DANS UN BOÎTIER DE CÂBLAGE OU DE COMPOSANTS ÉLECTRIQUES AU COURS DE L'INSTALLATION DU NÉCESSAIRE.

WARNING -TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS AVERTISSEMENT - AFIN DE PRÉVENIR L'ENDOMMAGEMENT OU L'ABRASION DES CABLES, ÉVITER TOUT CONTACT ENTRE CES CABLES ET LES BORDURES DES TOLES OU TOUT AUTRES OBJETS TRANCHANT

WIRING DIAGRAM

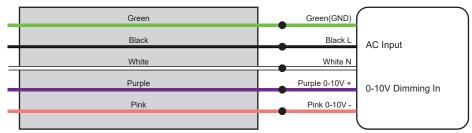



- For not dimmable or forward & reverse phase dimming, use only black (L), white (N) & Green (GND).
- Don't use 0-10V and Forward & Reverse Phase dimming together. 2.


RETROFIT INSTALLATION


NOTE: This product is not intended for retrofitting Insulation-Contact enclosures. The enclosure would need to be removed before installation of this luminaire.


- 1. Make sure the POWER IS TURNED OFF at the source before retrofitting the luminaire.
- If accessories are needed please go see appropriate accessories installation, in the accessory section (p. 3)
- If existing lamp and trim are present, remove from ceiling or move it out of the way as it will not be needed during installation.(fig.1) Measure the ceiling opening to make sure the edge of the luminaire will cover the entire hole and still sit firmly in the ceiling before proceeding. See dimension tables for more information.
- Remove J-box faceplate. Disconnect all wires to the ballast and remove ballast from J-Box. Remove appropriate round knock out and attach the fixture conduit whip into knock out. Follow wiring diagram for connection, using the provided connectors. Reattach J-box faceplate. (fig. 2)
- If the fixture is not factory preset for CCT and lumen Output, adjust the fixture power to desired lumen output by sliding the output switch. Adjust the color temperature to desired one, by sliding the CCT selector switch. Make sure the switch is never in between positions. (fig. 4)
- Close the cover and ensure it's well locked and can't be opened back with hand. If the lock cover need to be open again, use a flathead screw driver to unclipped and open. If desired, appropriate CCT and output boxes can be ticked with a pen. (fig. 4)
- Squeeze the two spring clips so they are in an upright position and insert fixture into mounting plate. (fig. 5)
- Once fixture is inside the frame, release the spring clips and continue pushing fixture until securely fixed and flush with ceiling. (fig. 6)
- Restore power at the source and the installation is

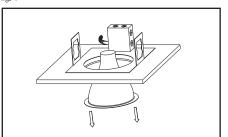

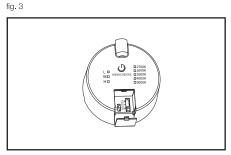

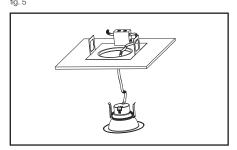

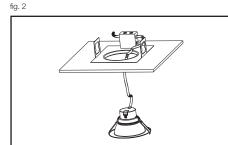

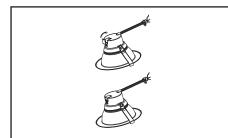

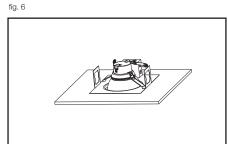


fig. 4










For model#: SLFT#G3/9CCT5S/DUALDIM, SLFT\$HOG3/9CCT5S/DUALDIM, Where # means 4-9.5 which indicates the size and \$ means 6 or 8 which indicates the size.


DIRECT MOUNT AND NEW CONSTRUCTION INSTALLATION


- Make sure the POWER IS TURNED OFF at the source to the location in which you are installing the product.
- If accessories are needed please go see appropriate accessories installation, in the accessory section (n. 3)
- If using a new Construction Plate, install it in the ceiling following its own installation instruction. (fig. 1)
- 4. If a new hole is needed, use a hole cutter and set the diameter according to the dimensional table, or cut along the edge of the new construction plate prepared for the desired size (fig. 2).
- If the fixture is not factory preset for CCT and lumen Output, adjust the fixture power to desired lumen output by sliding the output switch. Adjust the color temperature to desired one, by sliding the CCT selector switch. Make sure the switch is never in between positions. (fig. 3)
- 6. Close the cover and ensure it's well locked and can't be opened back with hand. If the lock cover need to be open again, use a flathead screw driver to unclipped and open. If desired, appropriate CCT and output boxes can be ticked with a pen. (fig. 4)
- Insert luminaire conduit into a preinstalled J-box by other or into the New Construction Frame J-box. and wire to the power source following wiring diagram (p. 1). Squeeze the two spring clips so they are in an upright position and insert fixture in the ceiling. (fig. 5)
- 8. Once fixture is inside the ceiling, release the spring clips and continue pushing fixture until securely fixed and flush with ceiling. (fig. 6)
- Restore power at the source and the installation is complete.

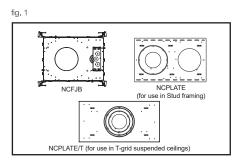


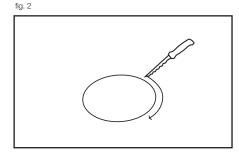

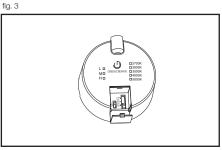


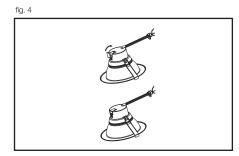

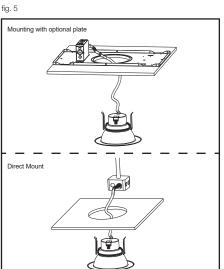

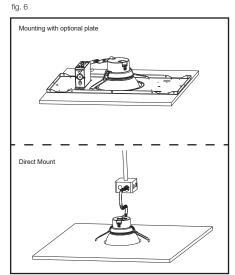

RETROFIT, DIRECT MOUNT AND NEW CONSTRUCTION INSTALLATION

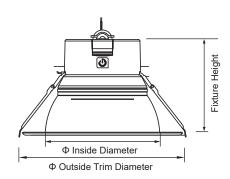

Fixture	Inside Diameter	Outside Trim Diameter	Fixture Height	Minimum Cutout	Maximum Cutout
SLFT4	4-1/8"	5-15/16"	4-1/8"	4-1/8"	5-1/8"
SLFT6	6-1/16"	8-1/4"	4-15/16"	6-1/8"	7-1/2"
SLFT8	7-5/8"	10-1/4"	5-11/16"	7-11/16"	9-7/16"
SLFT9.5	8-5/8"	11-3/8"	6-3/16"	8-11/16"	10-9/16"

SLFT4 is compatible with most standard plates with aperture ranging from 4-1/8" to 5-1/8". SLFT6 is compatible with most standard plates with aperture ranging from 6-1/8" to 7-1/2". SLFT8 is compatible with most standard plates with aperture ranging from 7-11/16" to 9-7/16". SLFT9.5 is compatible with most standard plates with aperture ranging from 8-11/16" to 10-9/16".







For model#: SLFT#G3/9CCT5S/DUALDIM, SLFT\$HOG3/9CCT5S/DUALDIM, Where # means 4-9.5 which indicates the size and \$ means 6 or 8 which indicates the size.


SELECTFIT DUALDIM ACCESSORIES INSTALLATION

TRIM INSERT (for 4", 6" and 8", SLFTx/CL/TRIM) and WALL WASH (for 4" and 6" models, SLFTx/WW/ACC)


- Locate the retainer clips at the edge of the top of the trim insert or wall wash insert. Locate the locking channel at the edge of the optical diffuser.
- Insert and push the trim or wall wash inside the fixture until it clicks into the lens and is securely fasten. All retainer clips should be locked in the diffuser locking channel, and trim insert should be flush with the downlight reflector and flange.
- For wall wash direct the open side toward the wall 3. you want to graze.

Note: Trim insert and wall wash accessories can not be used together.

TRIM INSERT

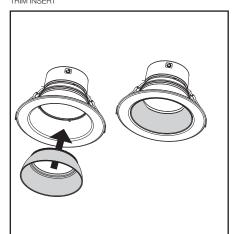

WALL WASH INSERT

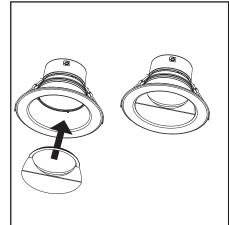

GOOF RING

- If a goof ring is required, please proceed to the goof ring installation before installing the fixture in the ceiling.
- Squeeze spings upward and insert goofring around the downlight. Then proceed to the downlight installation.

