



CLICK SENSOR DOWNLIGHT INSTALLATION GUIDE - WARNING

- WARNING Read all product labels and instructions before installing fixture.
- WARNING Read all product labels and instructions before installing fixture.
- WARNING Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. Installation should be performed only by a qualified electrician in accordance with the National Electrical Code and relevant local code.
- WARNING Risk of fire or electric shock. Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings.
- WARNING To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- WARNING Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- WARNING The recessed luminaire is intended for mounting only in a covered ceiling where only the led side of the luminaire will be exposed to damp or dry locations.
- WARNING INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN DISCONNECTED.

4" J-BOX INSTALLATION

- 1 Make sure the POWER IS TURNED OFF at the source to the J-box in which you are installing the product.
- Measure the screw holes spacing of the pre-installed 4in J-box (not provided) and confirm it's 3-1/2" (90mm). Thread the provided screws into the appropriate threaded holes of the 4in J-box. Install screws half way, leaving enough space between the J-box and the end of the screws to be able to insert them through the keyholes of the fixture. (fig. 1)
- Wire the wires from the back of the fixture to power source inside the J-box (black to hot, white to neutral, green to ground). Carrefully tuck all the wires and connectors inside the J-box. (fig. 2)
- 4 Remove the lens from the fixtures by rotating counter clockwise. (fig. 3)
- 5 Align the fixture with the J-box and insert screws through the fixture keyholes.
- Rotate the fixture counter clockwise until the screws slide into the narrower end of the keyholes. Tighten the screws, until the fixture is securely fixed and flush with the ceiling and/or the J-box. (fig. 4)
- Reattach the lens by placing the feet of the lens into the three slots and turn clockwise until firmly in place. (fig. 5)
- 8 For wet location applications, seal the edge of the Click and ceiling surface with waterproof silicone (Not provided). (fig. 6)
- 9 Restore power at the source, check fixture and sensor operation, and the installation is complete.

