

TRACK HEAD INSTALLATION GUIDE – WARNING

WARNING – Read all product labels and instructions before installing the fixture.

WARNING – To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

WARNING – Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING – The released luminaire is intended for mounting only in a covered ceiling where only LED side of luminaire will be exposed to dry or damp environments.

WARNING – INSTALLATION SHOULD ONLY BE PERFORMED AFTER POWER TO THE FIXTURE HAS BEEN DISCONNECTED.

CAUTION – TO REDUCE THE RISK OF FIRE AND ELECTRONIC SHOCK, USE WITH THE APPROPRIATE TRACK SYSTEM.


CAUTION – FOR USE WITH CEILING-MOUNTED TRACKS ONLY.

- Do not install any part of this system (TRACK) less than 7 feet (2.2m) above the floor.
- Test the compatibility of the track system and track lamp adaptor before installing the track lamp.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ADAPTER AND TRACK TYPE RECOGNITION


J-TYPE ADAPTER

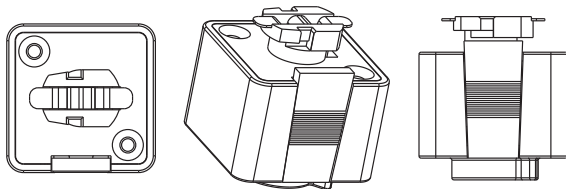


GC AND J-TYPE TRACK

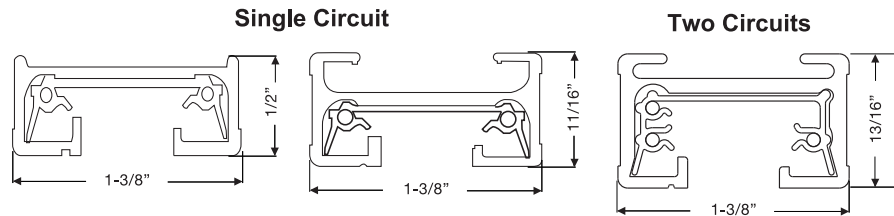

H-TYPE ADAPTER

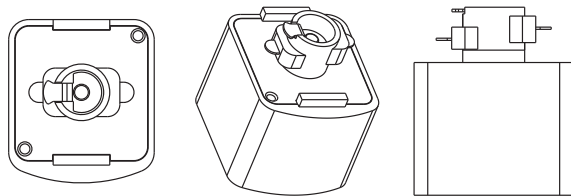


H-TYPE TRACK

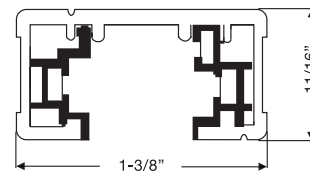

NOVA TRACK INSTALLATION GUIDE – GC & J TYPE TRACK SYSTEM

1. Make sure the power is TURNED OFF at the source of the track system you are installing the fixture.
2. Make sure the fixture's adapter is a J type and compatible with the J track system. (fig. 1)
Note: the J type adapter is compatible with single or two-circuit track types. Simply lift the contact to its up position for two-circuit application. (fig. 2)
3. Insert the head of adapter into the slot of the track rail making sure the locking tab is parallel to the track's polarity line.
Note: the Polarity contact direction. (fig. 3)
4. While holding down the lock tab with your thumb, push the fixture upward, then twist the body of the fixture 90 degrees until the locking tab on the adapter snaps into the track groove. (fig. 4 & 5)
Note: The adapter only rotates in one direction. Do not forcefully rotate the adapter in the wrong direction as it may damage it.
5. While holding the adapter with one hand, use your other hand to adjust the track towards the wall. You can also adjust the angle of the track head from 0° to 90°, marking can be found up to 35° adjustment. (fig. 6)
6. Restore power at the source and installation is complete. (fig. 7)

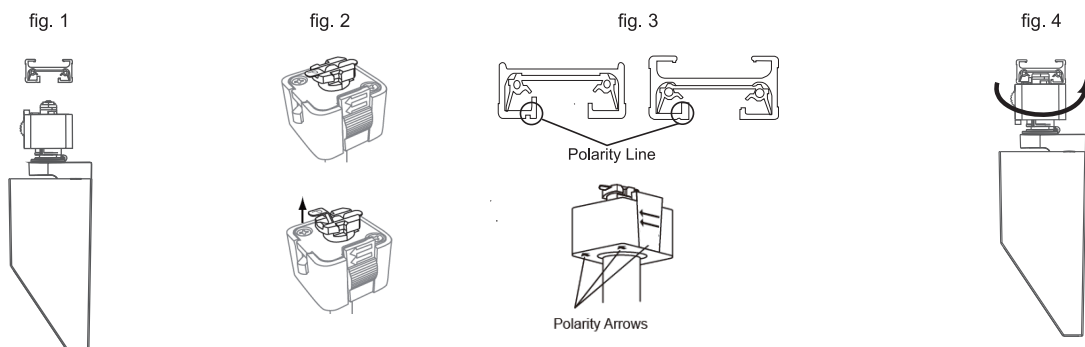

NOVA TRACK INSTALLATION GUIDE – GC & J TYPE TRACK SYSTEM

fig. 5

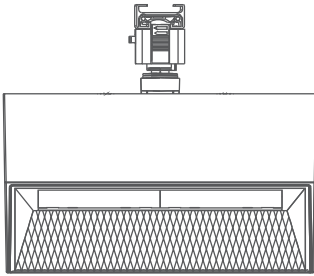


fig. 6


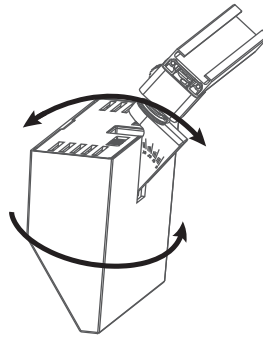


fig. 7

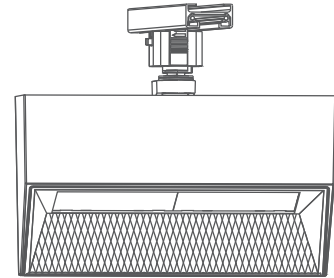

Removing the fixture:

1. While holding the fixture in place, pull the lock tab down and gently twist the fixture 90 degrees until it can easily be removed from the track groove

NOVA TRACK INSTALLATION GUIDE – H TYPE TRACK SYSTEM

1. Make sure the power is **TURNED OFF** at the source of the track system you are installing the fixture.
2. Make sure the fixture's adapter is an H type and compatible with the H track system. (fig. 1)
Note: the H type adapter is only compatible with single-circuit track types.
3. Insert the head of adapter into the slot of the track rail making sure Ground line is parallel with the ground pin.
Note: the grounding contact direction. (fig. 2)
4. While holding the adapter aligned with the track, push the fixture upward. Then while pulling down on the adapter sleeve twist the body of the fixture 90 degrees until the locking tabs on both sides of the adapter snap into the track groove. (fig. 3 & 4)
Note: the ground pin needs to be touching the grounding line. The adapter only rotates in one direction. Do not forcefully rotate the adapter in the wrong direction as it may damage it.
5. While holding the adapter with one hand, use your other hand to adjust the track towards the wall. You can also adjust the angle of the track head from 0° to 90°, marking can be found up to 35° adjustment. (fig. 5)
6. Restore power at the source and installation is complete. (fig. 6)

fig. 1



fig. 2

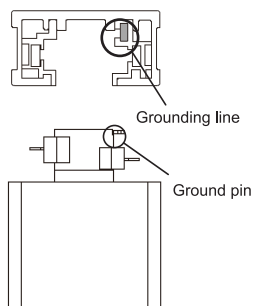


fig. 3




fig. 4

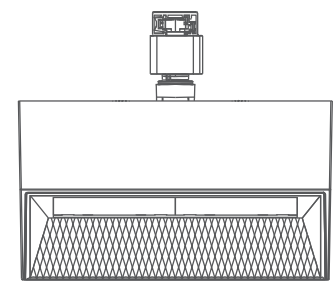


fig. 5


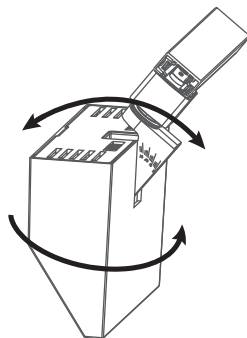


fig. 6

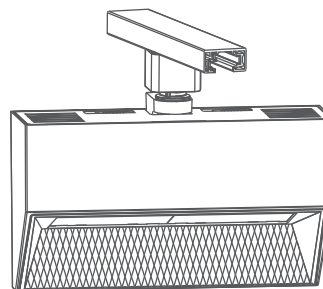

Removing the fixture:

1. While holding the fixture in place, pull the lock tab down and gently twist the fixture 90 degrees until it can easily be removed from the track groove